

Information for Customers Operating & Maintaining Belvac Machines

ISSUE 04 VOL. 8 OCTOBER 2005


LIGHT TESTER - UPPER ASSEMBLY SERVICE


Replace Harness when Replacing Upper Lighting Assembly:


When replacing the "Upper Lighting Assembly" on your modular or fixed base Light Tester, always replace the wiring harness supplied with the assembly. See part numbers included, below.

Wire harness wear negatively affects performance of the halogen lamps. Replacing both at the same time minimizes the risk of unexpected shutdown and time loss due to cable failure. Additionally, by replacing both, issues of interchangeablility will not result due to upgrades, revisions, *etc*.


Figure 1 indicates wear and tear found in the production environment over a period of years.

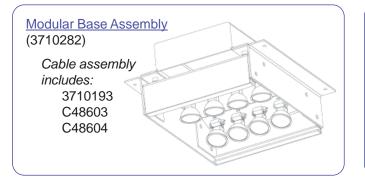

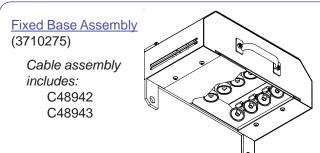

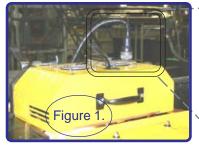

Fixed base assembly shown above, example of wear.

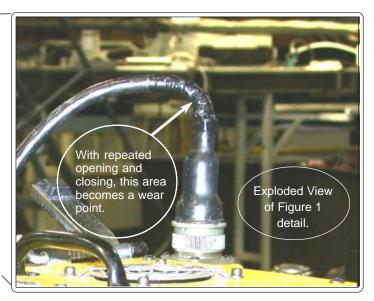



Contact Belvac Sales for more information.